

**Technical**

**Bulletin M207007**

 
**MEGAsys OV Intergrades  
Technical Notes**

**TN-207020107**

**v1.0**

2007/03/21  
Evertch Electronics Ltd.

# MEGAsys GUI System – Access Control

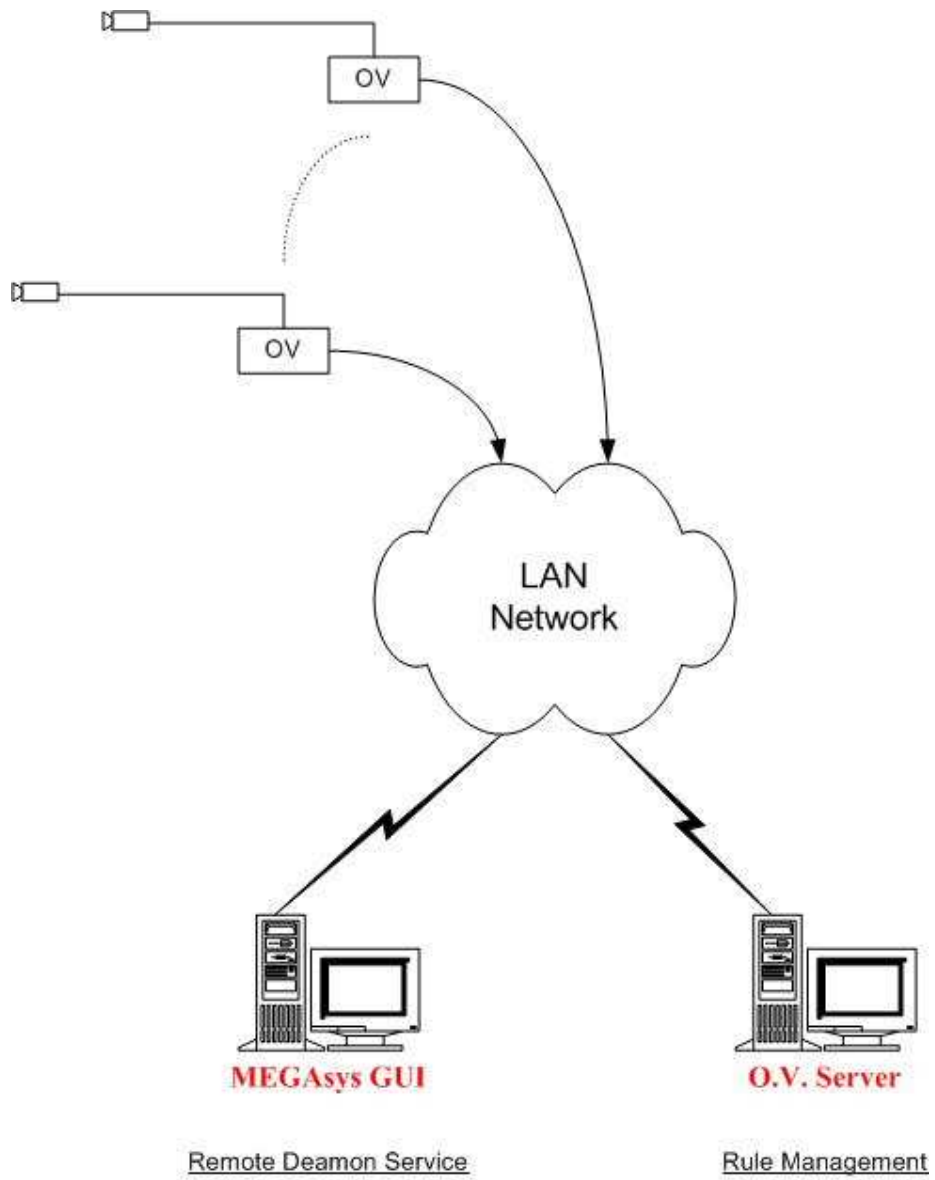


## O.V. Connection Service


<系統圖 1>

## MEGAsys GUI System – Access Control

 - 1) 安裝 OV Client 到 MEGAsys GUI 上, 用 ObjectVideo Management tool 打開 Daemon service 直接連到 OV 的 Device 上.

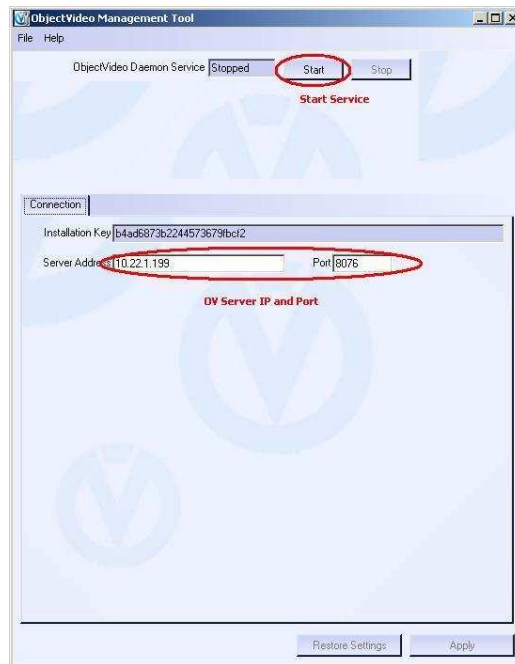

 - 2) 在 MEGAsys 按接連到 OV 上如下圖:

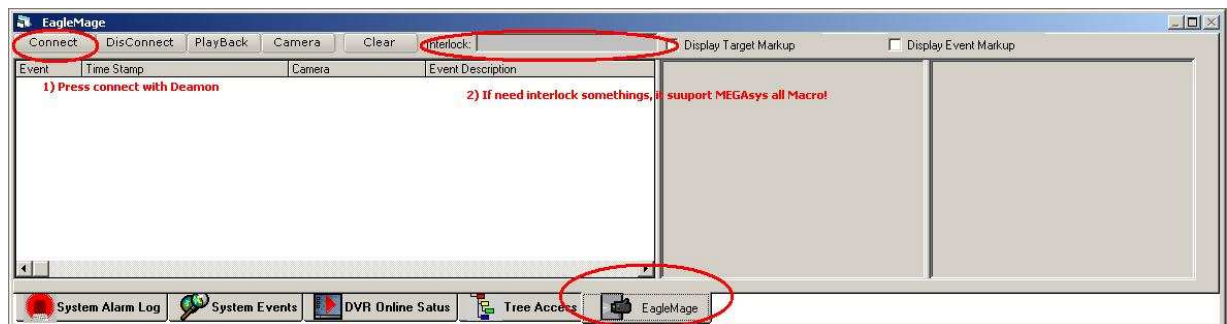


- 3) 如需要在 OV 發生報警時要連動 MEGAsys 任何圖像, 可直接使用 MEGAsys 內所有 MACRO 宏程序.

如呼叫 Visowave 的實時圖像:


```
VWC {ip:port}
```

MEGAsys 其他 MACRO 宏程序請參考 MACRO 說明書:

# MEGAsys GUI System – Access Control

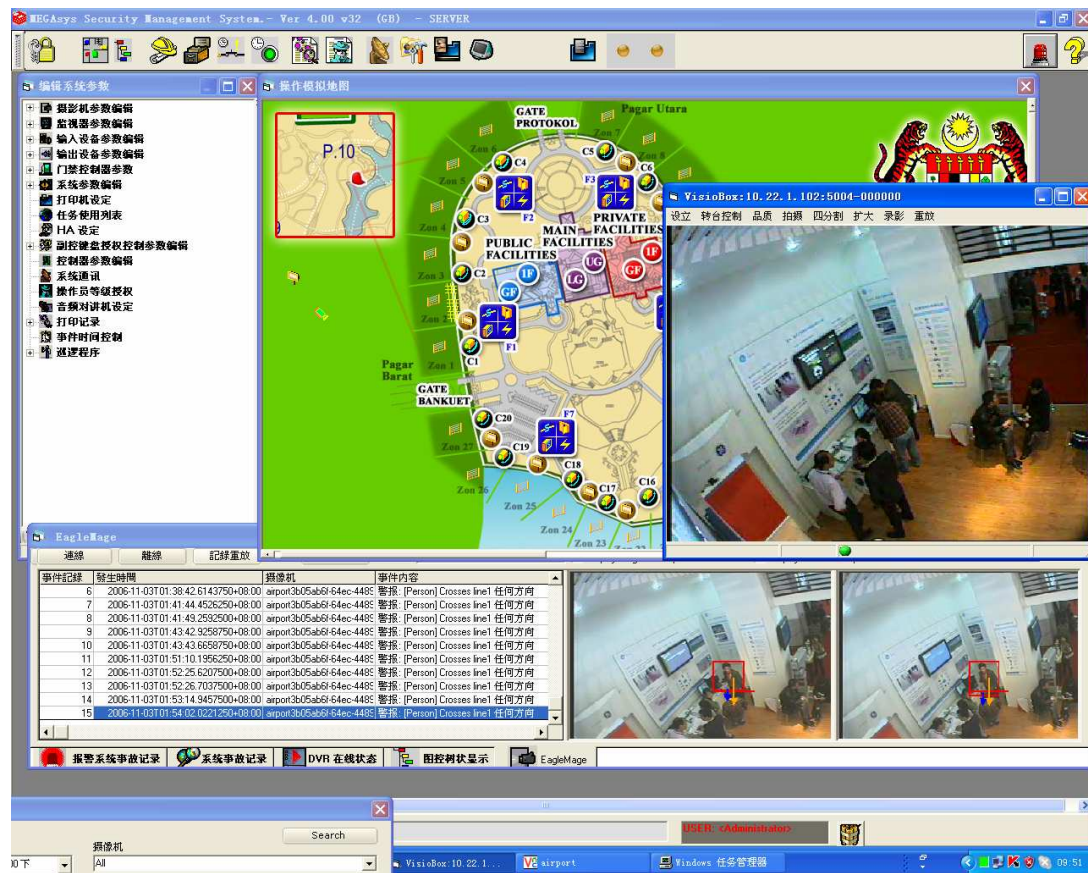 

按 Playback 可看到系統記錄:

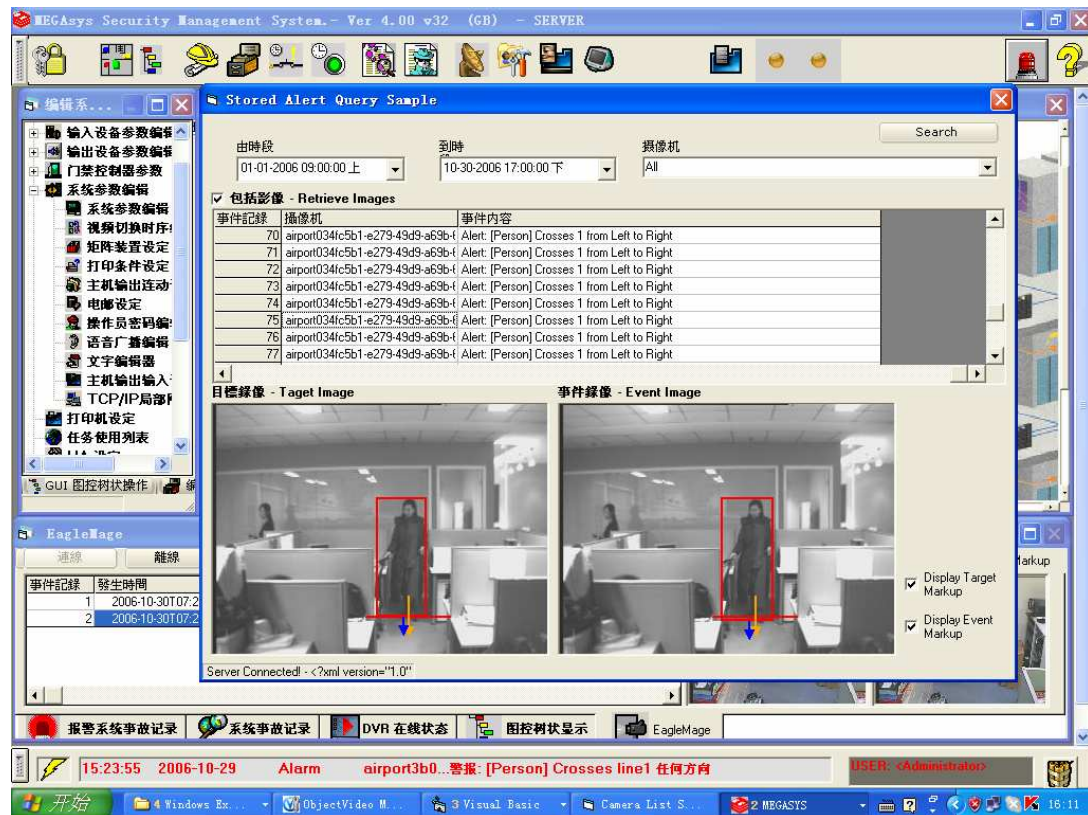 

## Hints for Using the Alert SDK

- 1) From a command prompt,  
**cd into the Program Files\ObjectVideo\Alert SDK\bin** directory.
- 2) Type:  
**c:\Windows\Microsoft.NET\Framework\v1.1.4322\regasm\ClientSDKXML.dll/tlb:ClientSDKXML.tlb**

The Alert SDK-enabled applications must include all files from the

**C:\Program Files\ObjectVideo\Client SDK\bin\ folder**

in the same directory as their compiled .exe file (see the sample code for examples). To use the System Simulator, you also need to copy the System Simulator DLL to that directory. The System Simulator DLL is located in

**C:\ProgramFiles\ObjectVideo\Client SDK\System Simulator\ClientSDKSystemSimulator.dll.**